





## INSTRUCTION SHEET BMW F 650 GS / Dakar REAR 2005-2013

- Route the hose of the HPA as shown in the picture
- Use the added hardware to mount the adjuster knob on the added bracket.
- Use the original place

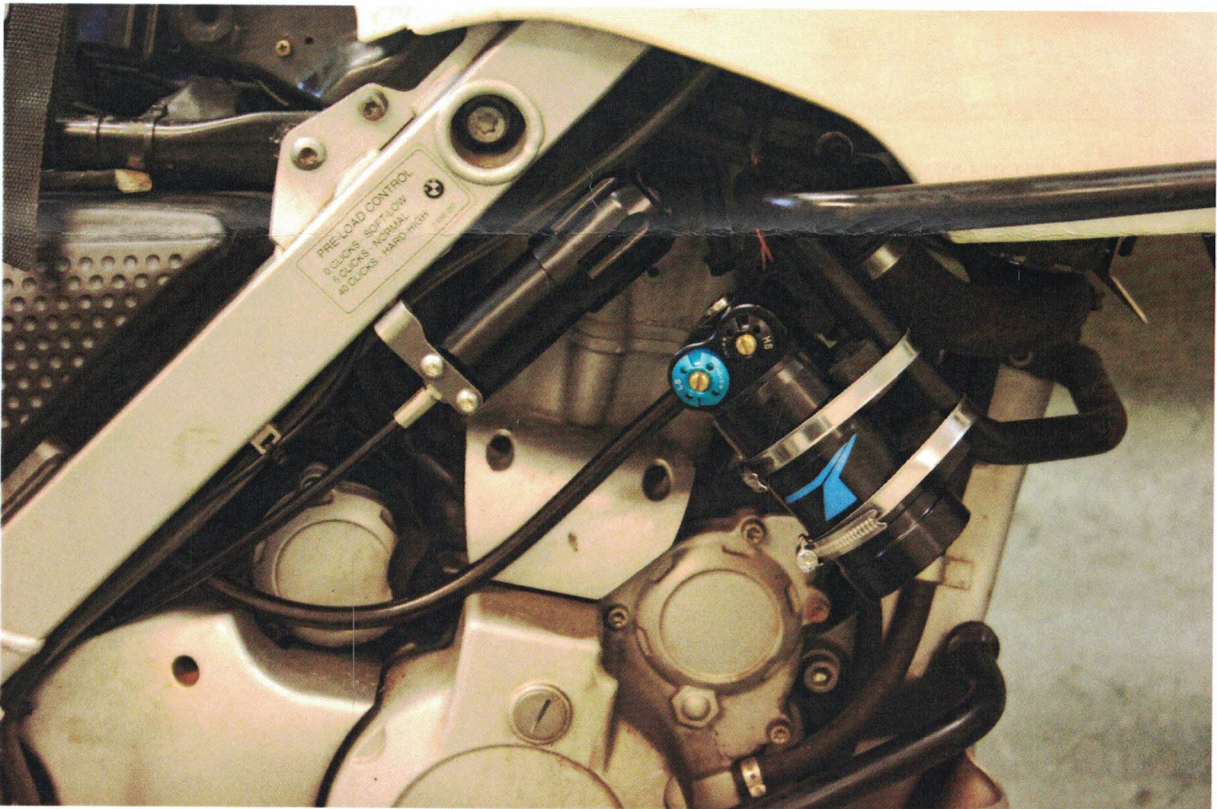

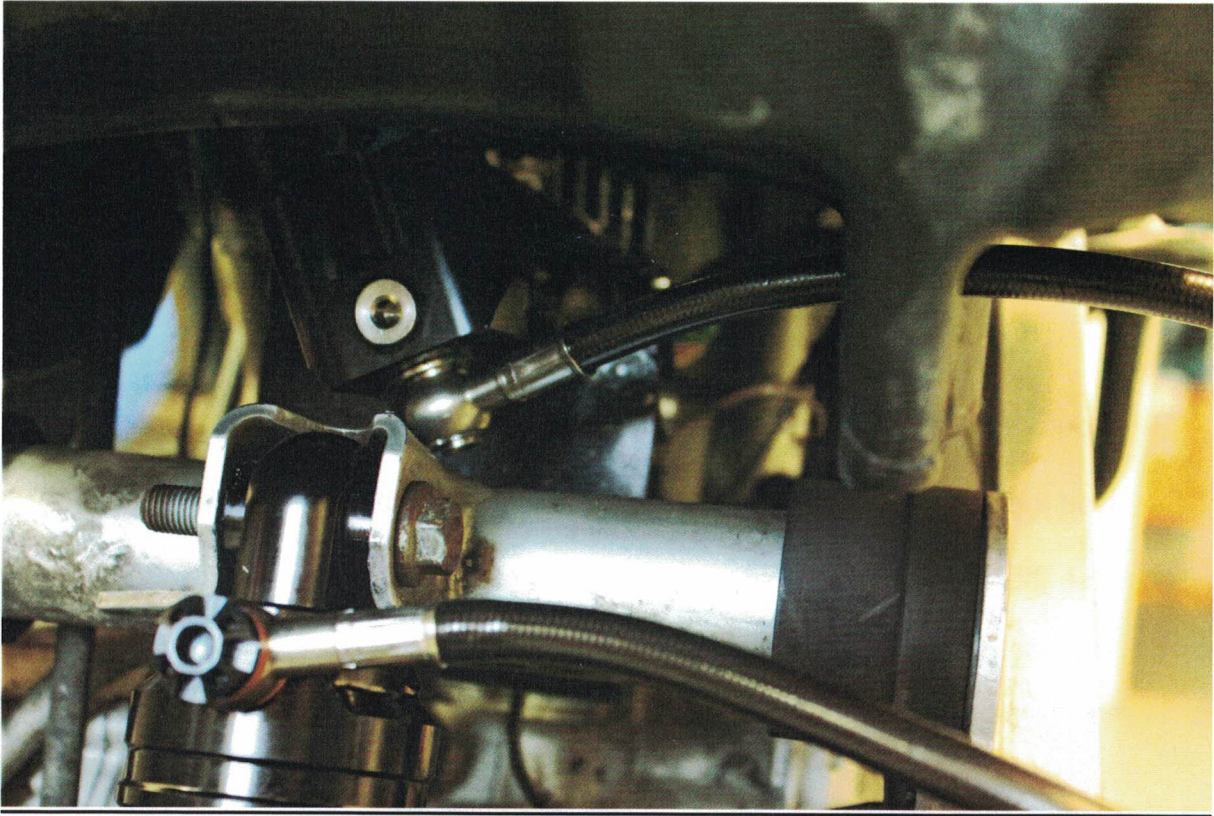

**ADDED HARDWARE :**

Bolt M6x25	2 pcs
Bracket HPA004	1 pc
Rubber support block	2 pc
Support strap	2 pc