




INSTRUCTION SHEET BMW R 80 GS / R 100 GS REAR 1986-1996

- Route the hose of the HPA and Reservoir as shown in the picture
- Use the added hardware to mount the reservoir to the frame.
- Use the bracket to add the HPA to the reservoir

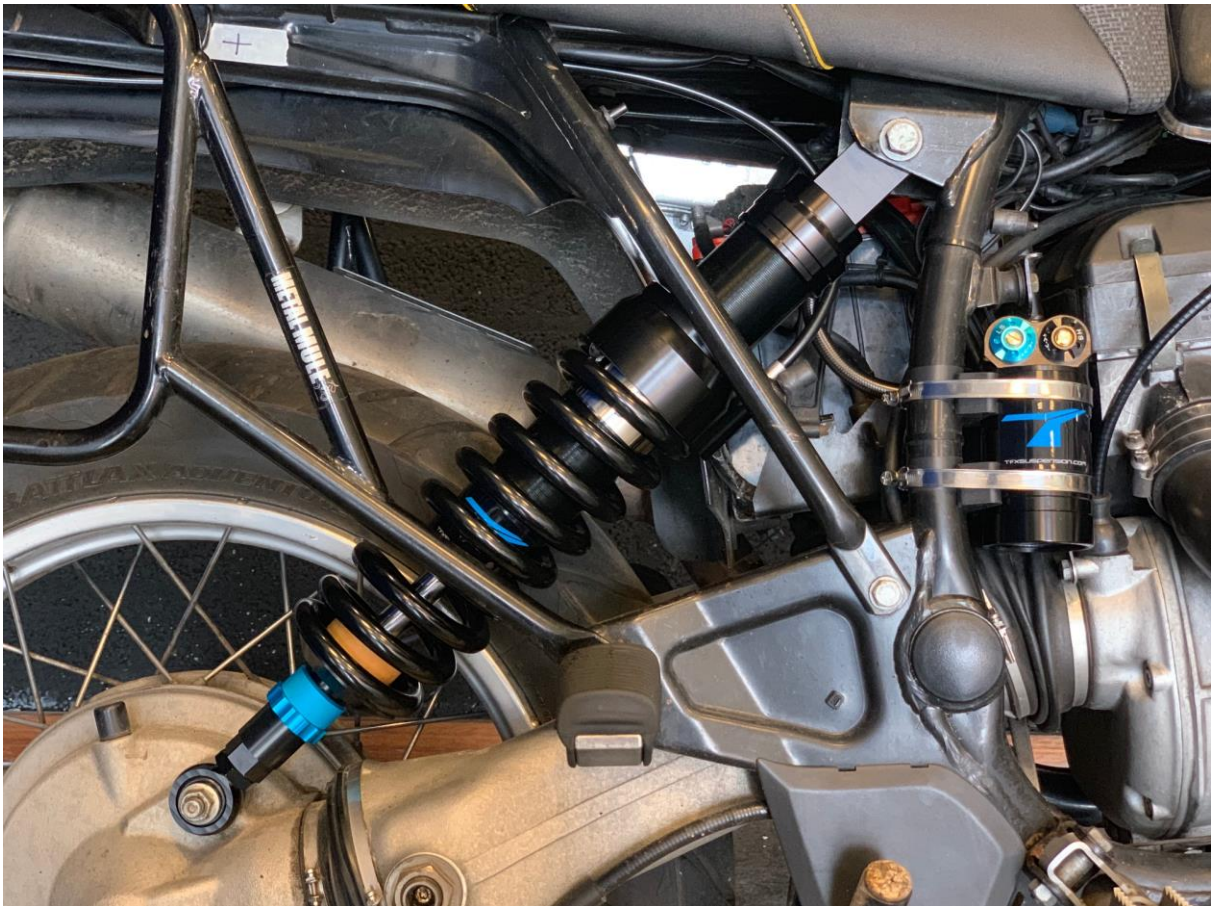



ADDED HARDWARE :

Bracket reservoir to HPA	1 pc.
Bolt M6x20	2 pc.
Nitrogen Reser. support rubber	2 pc.
Nitrogen Reser. support clamp	2 pc.