




## INSTRUCTION SHEET BMW 1200 RT REAR 2005-2013

- Route the hose of the HPA as shown in the picture
- Use the added hardware to mount the adjuster knob on the added bracket.
- Use the original place

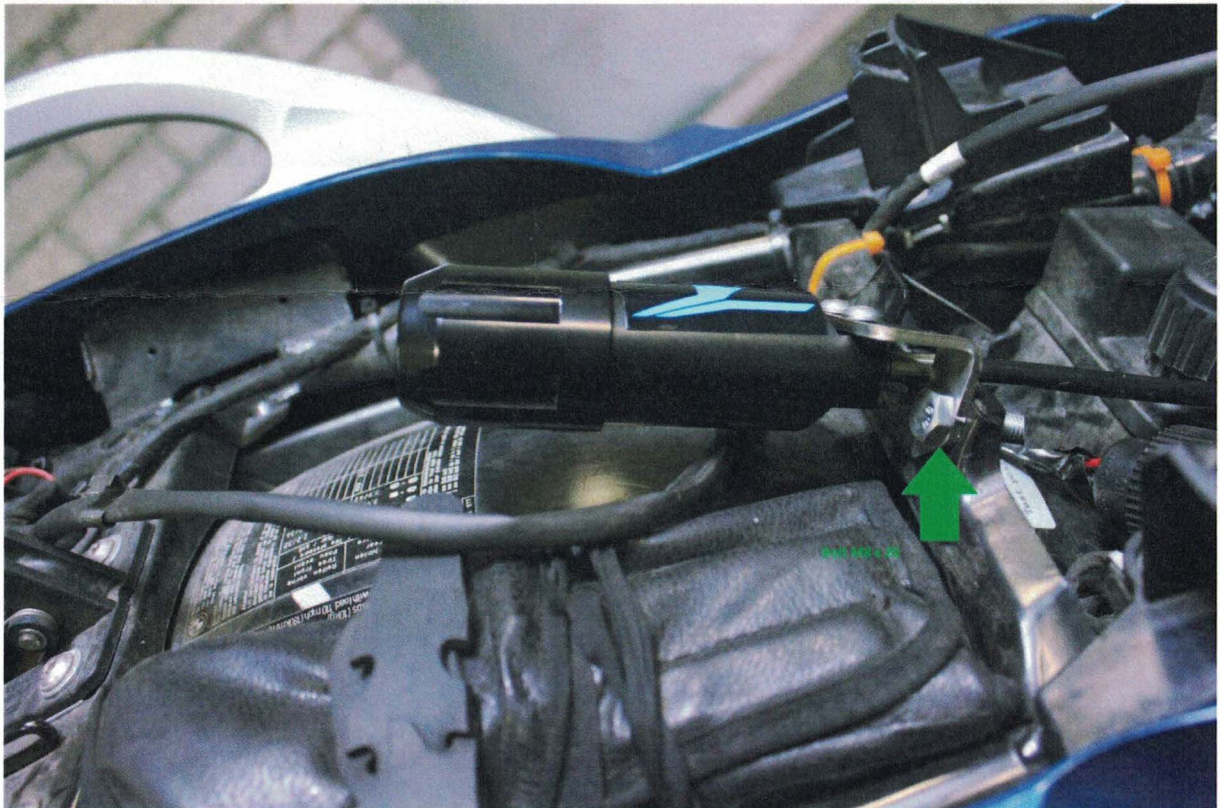

Bolt M8x20

