





INSTRUCTION SHEET BMW F 650 GS / Dakar REAR 2000-2007

- Route the hose of the HPA as shown in the picture
- Use the added hardware to mount the adjuster knob on the added bracket.
- Use the original place

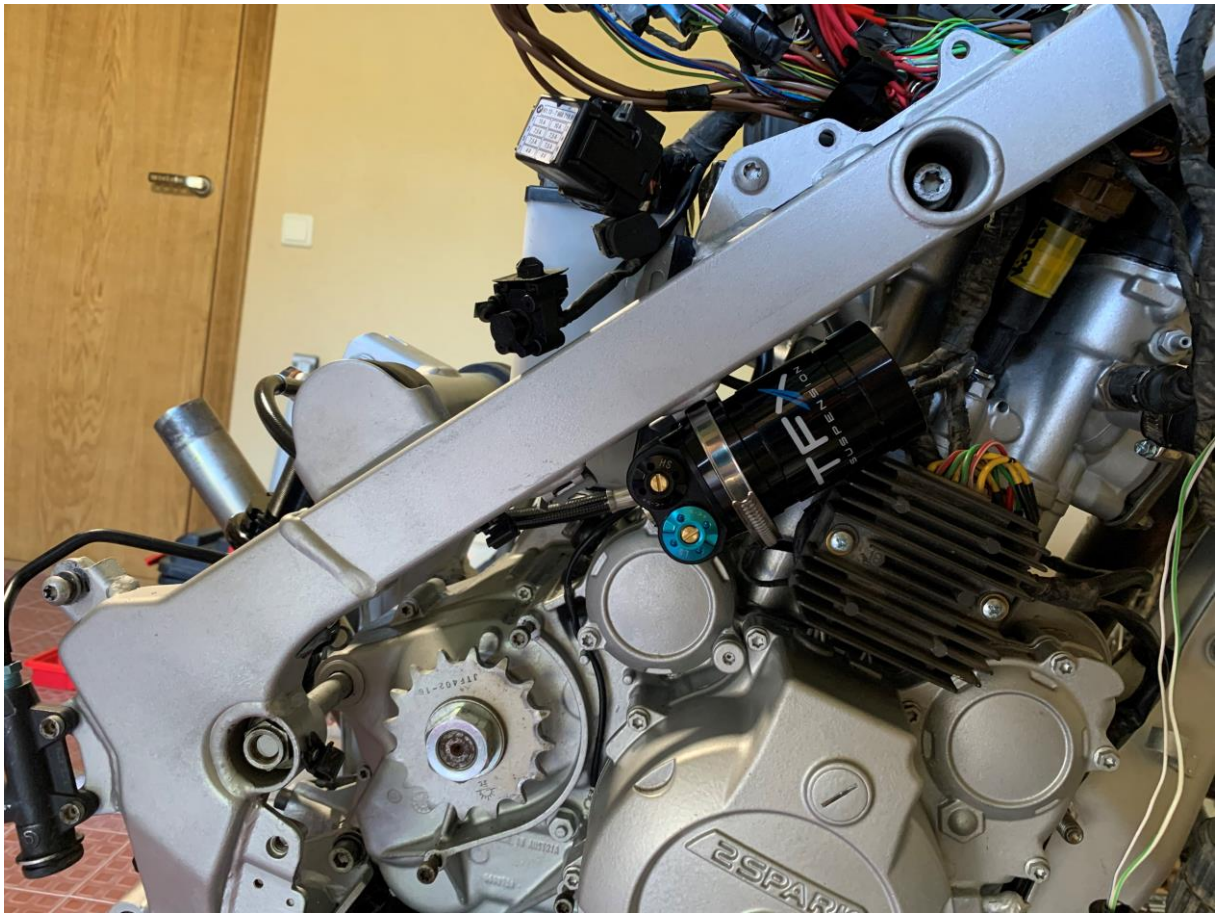

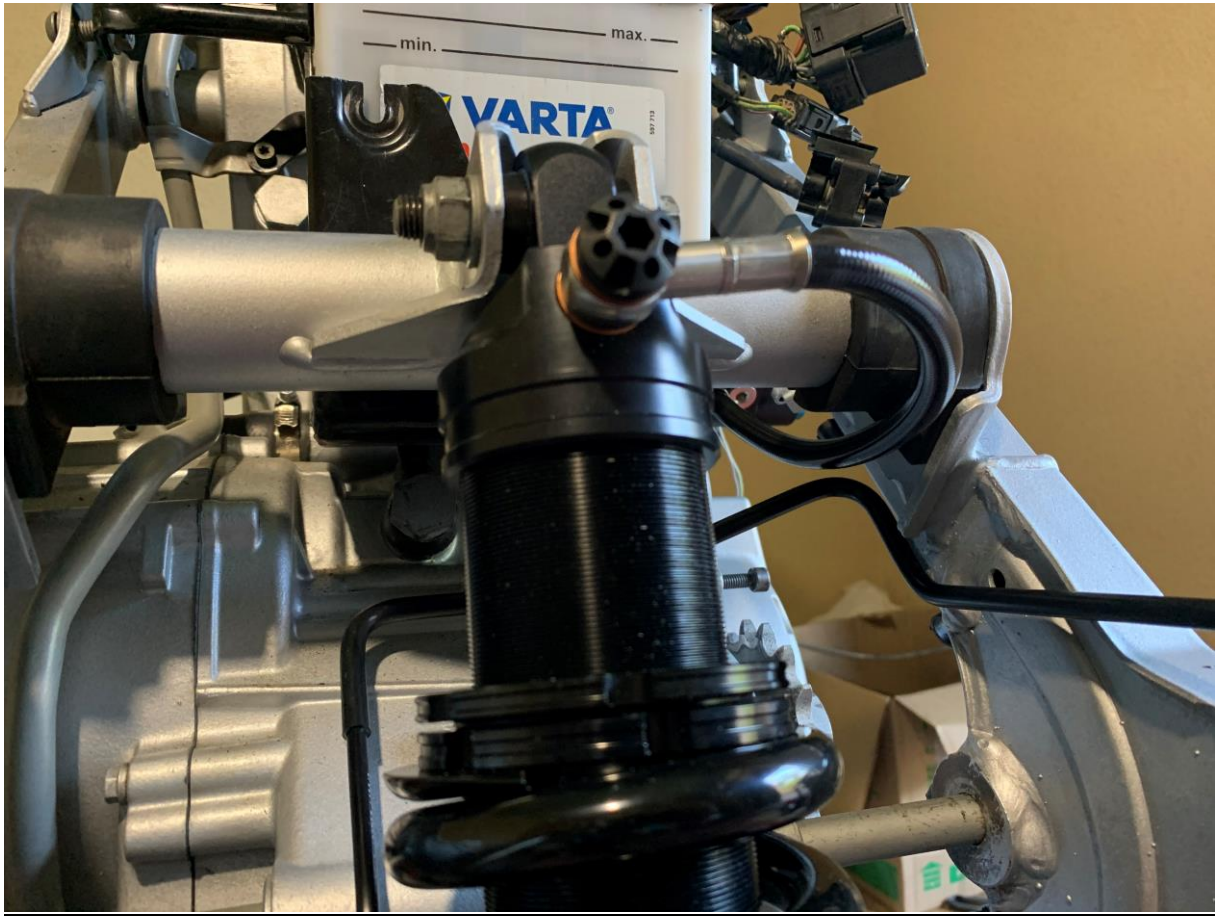



ADDED HARDWARE :

Bolt M6x25	2 pcs
Bracket HPA004	1 pc
Rubber support block	2 pc
Support strap	2 pc