




## INSTRUCTION SHEET BMW R 1150 R REAR 2001-2006

- Route the hose of the reservoir as shown on the picture
- Use the added hardware to mount the reservoir to the frame
- Use the original mounting place for the HPA Knob

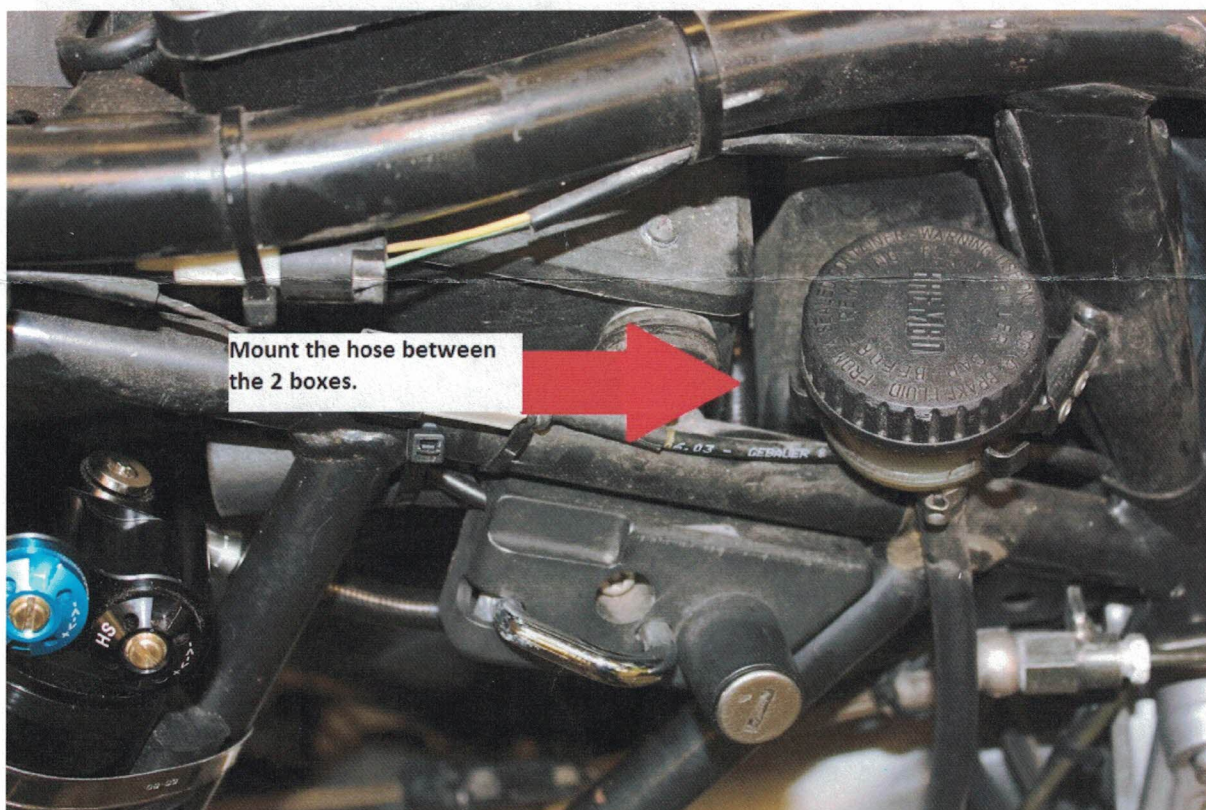

### **ADDED HARDWARE :**

Bolt M6x25		2 pcs
Bracket HPA003	(if with HPA)	1 pc
Support Rubbers		2 pcs
Fastening straps		2 pcs

(see also pictures other side)



