




INSTRUCTION SHEET Yamaha XT 1200 Z REAR 2010-2017

- Place the bike on the center stand and remove the current shock absorber.
- Place the TFX Suspension shock in the bike, type 141 with reservoir as shown in the picture. If your shock is equipped with the optional hydraulic preload adjuster place knob of the HPA to the right side of the bike.
- Use the two added clamps and rubber blocks to mount the reservoir on the sub frame.

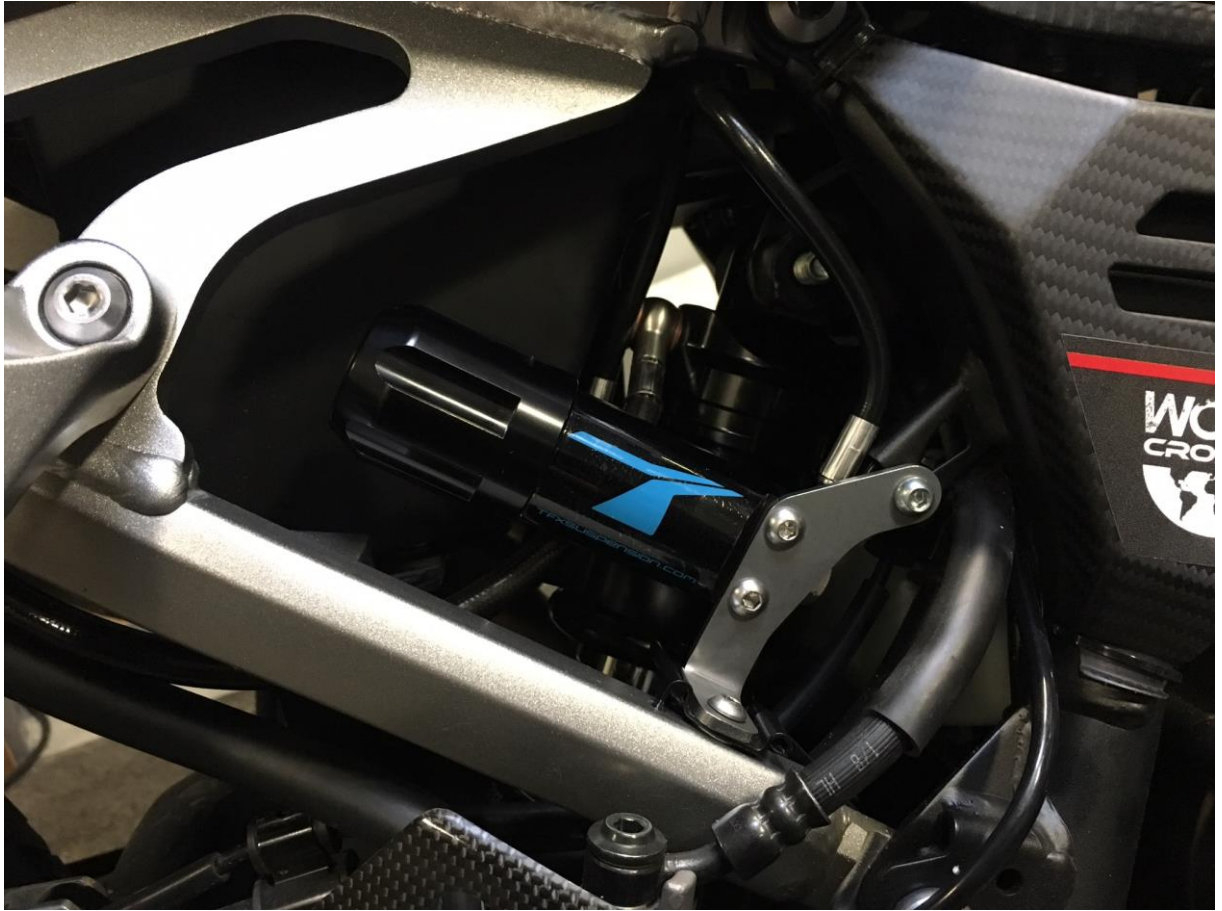



- Route the hose of the HPA as shown in the picture
- Make sure all the hoses are not obstructed
- Make sure the fairing will fit over the reservoir and adjuster knob
- Place all the bolts back and tighten them with the proper torque